CHIAYO

Operation manual

NB-3100 Rechargeable Belt-pack Transmitter









CHIAYO ELECTRONICS CO., LTD.

Parts and functions

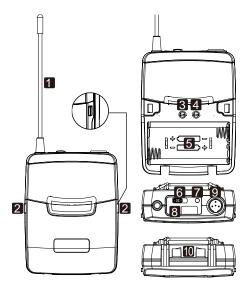


- 1 Antenna
- 2 Cover release buttons
- 3 High-impedance gain control (GT)
- 4 Low-impedance gain control (MT)
- 5 Battery compartment
- 6 Power switch
- 7 Battery power indicator
- 8 IR sensor area
- 9 Audio input connector
- 10 Charging contacts

 Battery installation & indicator



 
This transmitter requires two AA batteries to operate.



To install, open the battery cover and insert the batteries into the compartment (5).

IMPORTANT: Batteries contain corrosive acid that may leak and damage the transmitter when stored for a long period. Batteries should be removed from the transmitter before storing without use for more than 4 weeks.

Channel synchronizing of the receiver and transmitter

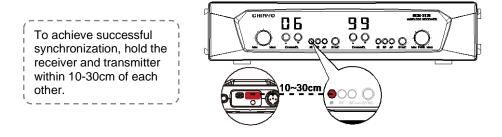



Changing the transmitter's channel Press the synchronizing button of the receiver and the receiver will transmit the frequency to the transmitter and synchronize its channel.

If it doesn't work check that you have the IR sensor panels aligned, that they are facing each other, devices are within 10~30cm of each other, and try again.

GAIN setting (GT | MT)

Gain control enables the user to set different output levels.





GT (LEFT) is for the use of instrument with high impedance, such as guitar.



MT (RIGHT) is for the use of low impedance such as lapel or headset microphones

CHIAYO ELECTRONICS CO., LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan Tel: 886-2-27415741 | Fax: 886-2-27525242 Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan Tel: 886-5-2711000 | Fax: 886-5-5767611



1211468