

 
# CHIAYO

## DPRB-600M DPRB-500M


MP3 Recorder Player + Bluetooth  
Receiver Module



9001:2015

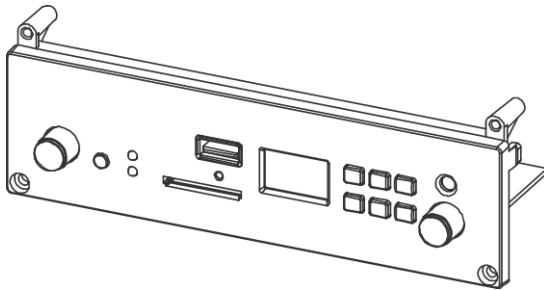

## Bluetooth receiver section (LEFT)

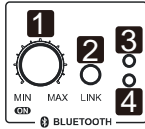 


1. Power/volume control
2. LINK button
3. LOCK LED
4. SCAN LED

### Linking instruction


 
- 1 Turn on the Bluetooth receiver and the LOCK LED will flash GREEN.



- 2 Approximately 9 seconds later, the LOCK and SCAN LEDs will flash GREEN and RED, which means it is ready for pairing.

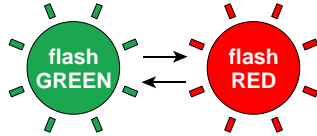

  - 3 Activate BLUETOOTH on your device (phone, tablet, PC., etc) and pair with external BLUETOOTH device named "BT AUDIO". After successful linking, the LOCK LED will be solid GREEN and you can play your music.

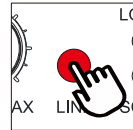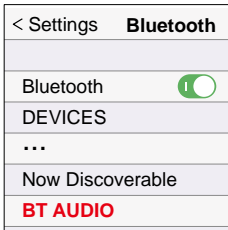


- 4 Pressing LINK button can cut the connection.


### Important

 - Press **SWITCH** button for disconnection and getting ready for new pairing.
- The BLUETOOTH can memorize and automatically connect to last-paired device.

## Digital recorder player section (RIGHT)

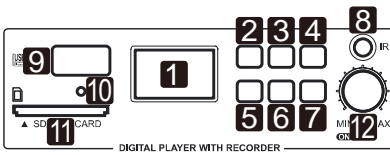

remote control ▶

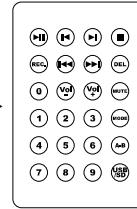 

1. LCD display
2. Press to return to previous track, press and hold to fast reverse.
3. Press to play/pause or stop recording.  
(readable formats: **mp3**, **wav** and **wma**)
4. Press to go to next track, press and hold to fast forward.
5. Press to record.
6. Press to switch repeat modes.
7. Press to stop playing or recording.
8. IR sensor area
9. USB input
10. USB/SD indicator: The LED flashes green during playing and red during recording. It lights red if there is no track to play, lighting green when playing or recording stops.
11. SD card input
12. Power switch/volume control

## Operating functions on the panel and the remote

Operating function	On the panel	On the remote
Play/pause	Press	Press
Record	Press  to record and  or  to stop.	Press  to record and  or  to stop.
Skip forward	Press	Press
Fast forward	Press and hold	Press and hold
Skip backward	Press	Press
Fast backward	Press and hold	Press and hold
Next folder	-	Press
Previous folder	-	Press
Track select (#0-9)	-	input track number, then press
USB/SD switch	-	Press
Repeat mode switch (ALL / SINGLE / FOLDER)	Press	Press
Volume control	-	Press  or
A-B section play	-	Press  to start, again to play section and again to stop
Delete tracks	-	Press  to delete track and again to confirm your delete
Mute	-	press  to mute/recover

**Note:**

- Supports FAT and FAT32 file systems only.
- Supports MP3, WAV and WMA music formats only
- Record track format: MP3; Bit rate: 128kbps; Sampling frequency: 44kHz
- Recordable only when USB/SD is detected.
- Record files will be stored in the RECORD folder of USB/SD.
- The files will be named as **FILE\_001**, **FILE\_002**, **FILE\_003**...etc.
- The name of a deleted track won't be applied to its next one.
- Recordable until **FILE\_999** appears with LCD displaying "**Num Full**".
- LCD displays **USB FULL** or "**SD FULL**" when insufficient memory left.
- LCD displays **SD LOCK** if the SD is locked.
- Don't remove the USB/SD during the recording process in case the interrupted track might be damaged.

**CHIAYO ELECTRONICS CO., LTD.**

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw  
Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan  
Tel: 886-2-27415741 | Fax: 886-2-27525242  
Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan  
Tel: 886-5-2711000 | Fax: 886-5-5767611

