
CHIRYO

Operation manual


italk Personal Belt-pack Amplifier

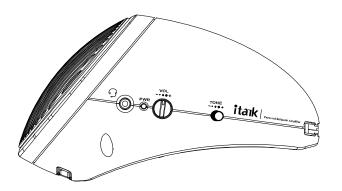






Parts and functions

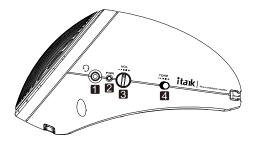

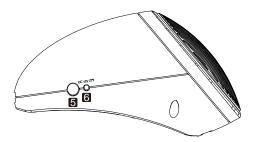

- 1. Mic input for headset, lavalier or wired microphone
- 2. Power/bettery low indicator LED
- 3. Power/volume control
- 4. Tone control
- 5. Charging port
- 6. Charging indicator LED

Standard Configuration Belt-pack amplifier

- Headset microphone
- Switching adaptor (12V DC, 1A)
- Φ3.5mm signal cable (100cm)
- Waist belt
- Speaker pouch
- Operation manual

Optional accessories

- NiMH battery (1.2V / 2100 mAH)
- Lavalier microphone
- Mini wired microphone (Φ3.5mm phone jack) + cable)

Microphone input options

Headset microphone




Lavalier microphone



Mini wired microphone




Operating Instructions



- 1. Please beware of battery polarity when installing the rechargeable batteries. Before first usage, please charge the batteries for at least 6 hours. Thereafter 6 to 8 hours of charging is necessary when batteries become weak.
- 2. This unit is delivered with adjustable waist belt. It can be belt-packed or shoulder-strapped.
- **3.** Set volume ③ and tone ④ to minimum level before power on. After turning this unit on, adjust volume and tone controls gradually till maximum gain before feedback.
- **4.** Insert the microphone plug completely into the MIC IN socket ⊕ to get the full contact, otherwise contact noise may occur due to loose contact. Adjust the microphone to as near the mouth as possible to get the best voice pickup.
- 5. Microphone and speaker should always maintain a certain distance to prevent feedback noise.

Battery installation

italk uses 4 AA-sized batteries to operate. To install the batteries, please open the cover of the battery compartment, then place them in marked polarity.



Battery charging

- After switch on, the Power/bettery low indicator LED ® will glow GREEN to indicate enough power and ready for operation. If this LED glows RED, it means the power is too low and battery recharge is necessary. (only for NiMH type)
- This product applies intellectual charging circuit. The charging indicator LED glows RED during charging process. It turns GREEN when batteries are fully charged and the charging process will automatically stop to prevent overcharge to batteries.
- When the charging indicator LED flashes RED, it means abnormal charging. Causes include that the rechargeable batteries have reached life span or batteries are not chargeable type.
- This product can be operated even during charging process.

Cautions

- This product uses 4 pieces of AA size battery. Alkaline or NiMH types are recommended. Do not attempt to recharge non-NiMH batteries in this product.
- It is advised not to pull and plug in the microphone contact frequently to prevent loose contact.
- When battery operating hour shortens tremendously or can not be charged, it means their life span has arrived and a new set of batteries is necessary. When changing the batteries, please replace all of them at the same time. Please do not mix and use new and old batteries together.

CHIAYO ELECTRONICS CO., LTD.

Http://www.chiayo.com.tw | Email: sales@chiayo.com.tw Office: 30, Lane 27, Section 4, Jen-Ai Road, Taipei 10685, Taiwan

Tel: 886-2-27415741 | Fax: 886-2-27525242

Factory: 88, Chung-Hsiao Street 2, Chiayi 60080, Taiwan

Tel: 886-5-2711000 | Fax: 886-5-5767611

